

# FZ series - power supply, output, options -

## 1. When power supply box S is used.

Power supply box S is provided as standard.

### 1-1. power supply

Power supply cable is connected from power supply box to power outlet.

\*Battery not available.

### 1-2. output

Default output 1: RS232C


\* output only (no input) when RS422A is installed in additional slot.

TCP/IP (FS-TI) can be connected to output 1.

Additional option slot 3

One of three options can be installed.

- RS232C(FS-RS) (output only, no input)
- RS422A (FS-R4)
- Relay contact (FS-LM)

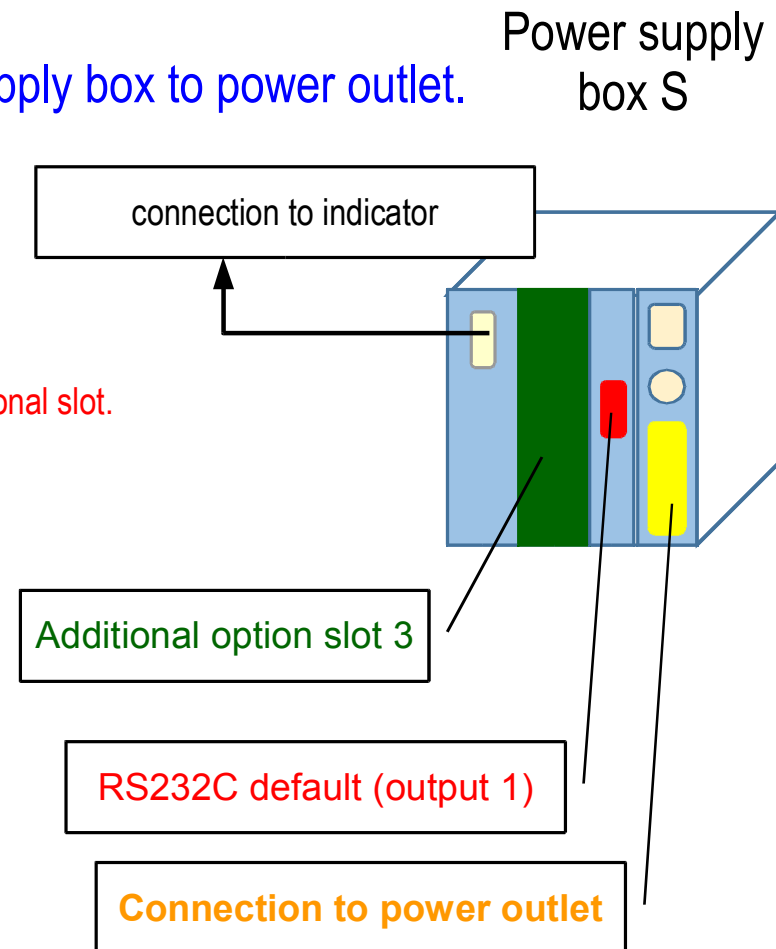

## 2. When power supply box M (FZ-PX(M)) is used.

### 2-1. power supply

Power supply cable is connected to option box.

\*battery not available.

### 2-2. output

Default output 1 : RS232C


\* output only (no input) when RS422A is installed in additional slot.

TCP/IP (FS-TI) can be connected to output 1.

Additional option slot 3:

One of two options can be installed.

{ RS232C (FS-RS) (output only, no input)  
RS422A (FS-R4)

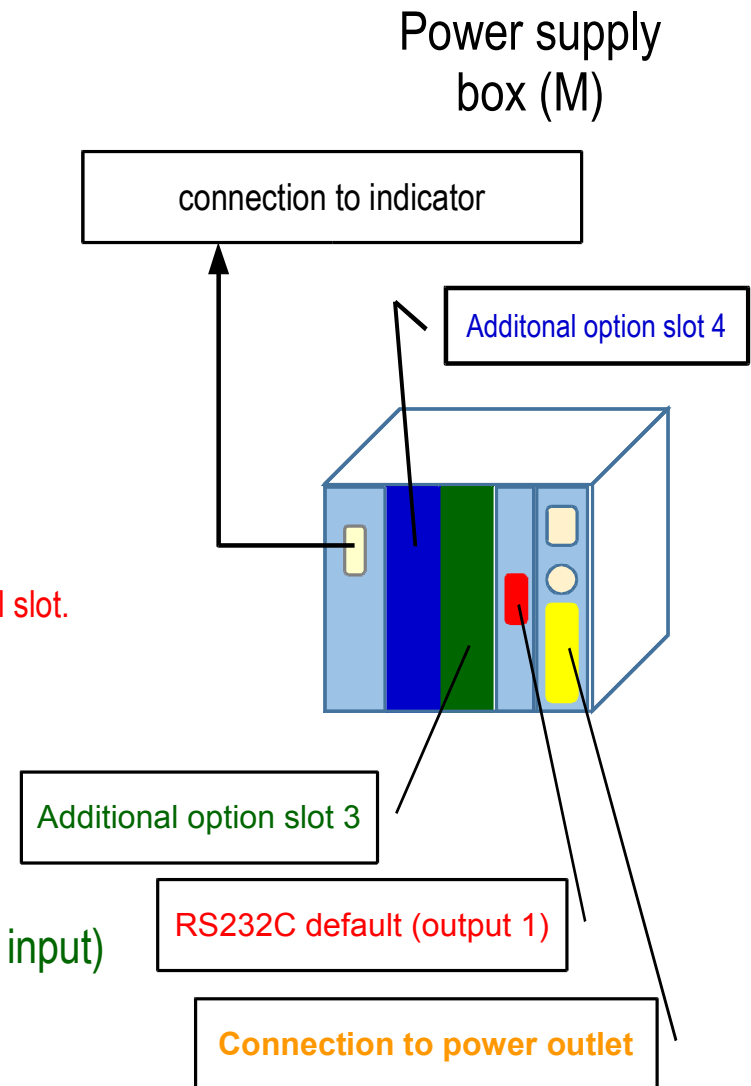

Additional option slot 4: Relay contact (FS-LM) can be installed here.